

- **ROUTINE MAINTENANCE**

Glass Cleaning

Required only when debris is observed on the glass surface of the carrier.

- Pull the film carrier all the way forward to fully open the upper glass as shown below.



CAUTION: Use care not to press down on the upper glass when it is open.

- Spray a small amount of common glass cleaner onto a clean, lint free cloth.
- First clean the bottom surface of the lower glass.
- Place a cloth (single layer) onto the lower glass. Next push the carrier back to close the top glass. Pull the cloth side to side slowly to remove any debris. Inspect the glass surfaces to insure a clean surface and repeat these steps as necessary.
- Inspect the top glass surface for debris. If it needs cleaning, pull the carrier forward as far as possible without opening the glass (Note the CAUTION statement above). Spray a small amount of glass cleaner on the cloth and lightly rub the top surface of the glass to clean.

CAUTION: Do not use canned air or other spray cleaners on the glass as this may blow debris or cleaning fluids inside the top cover of your ScanPro.